 


Huion Kamvas Annotation Display User's Guide

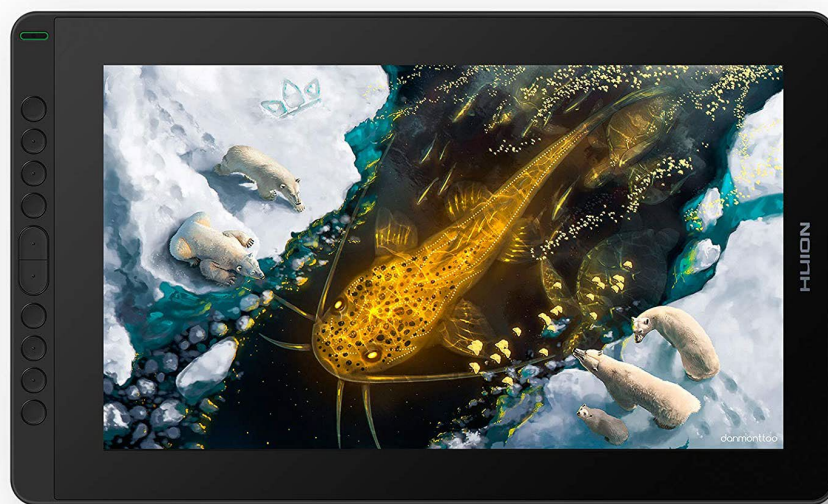

CHAFFEY COLLEGE

Huion Kamvas User's Guide

Scope:

This document applies to the use of a Huion Kamvas Pen Display for the purpose annotating video presentations within Chaffey College classrooms.

Overview:

 
The following document describes the features, and operation of the Huion Kamvas Pen Display. The pen display may be used to enhance PC based lessons by enabling the presenter to illustrate learnings, markup images, take notes, highlight important information and answer questions.

Features:

- 15.6" display with full HD resolution (1920 x 1080)
- Battery free pen with 8192 levels of pressure detection, up to 60° of tilt recognition and 2 customizable side switches
- 10 programmable hot keys on the left side of the panel

Note:

For more information on customizing pen controls, applications, etc. visit:

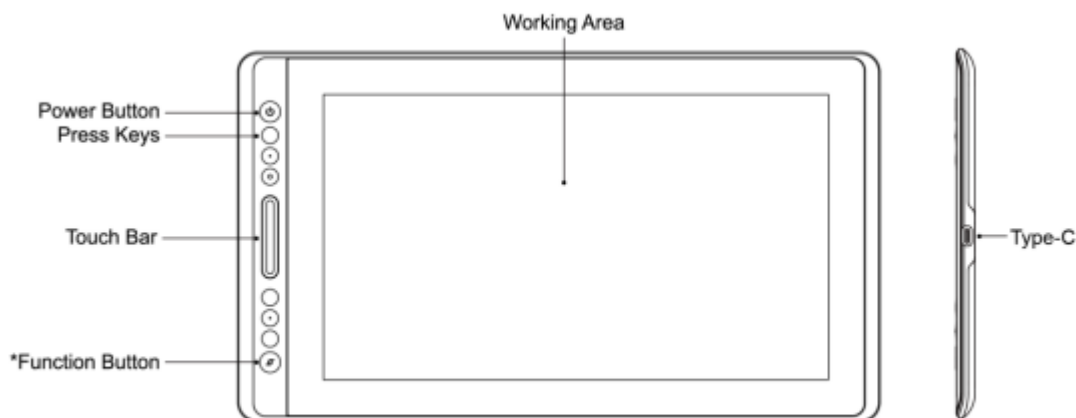

Huion Kamvas - Quick Start

Step 1: Press the power button to turn Huion Kamvas ON/OFF.

Step 2: The Huion Kamvas is set to mirror “Display 2”.

Note: If your station only has 1 display, it will only mirror that same display.



Step 3: Open your preferred application and drag it onto “Display 2”.

- **Note:** If your station only has 1 display simply open the application.



Huion Kamvas – Basic Operation

1. Using the pen

- Hold the pen

 
 
Hold the pen as you hold a normal pen or pencil. Adjust your grip so that you can toggle the side switch easily with your thumb or forefinger. Be careful not to accidentally press the switch while drawing or positioning with the pen.



Notice: When not in use, place the pen in the pen stand. Do not place the pen on the surface of screen, which may interfere with the use of other screen cursor positioning devices.


- Positioning the cursor

Move the pen slightly above the active area without touching the screen surface, the cursor will move to the new position accordingly. Press the pen tip on the screen to make a selection. Tap the screen once with the pen tip, or touch it to the screen with enough pressure to register a click.

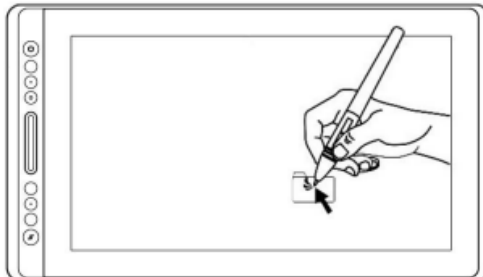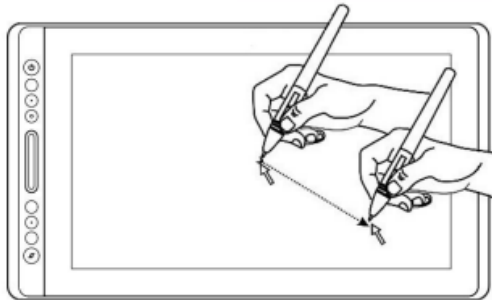


- Click

 Use the pen tip to tap on the screen once to produce a click. Tap to highlight or select an item on the screen and double-click to open it.

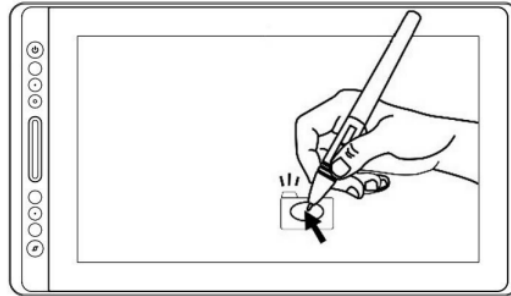


- Move

 Select the object, then slide the pen tip across the screen to move it.

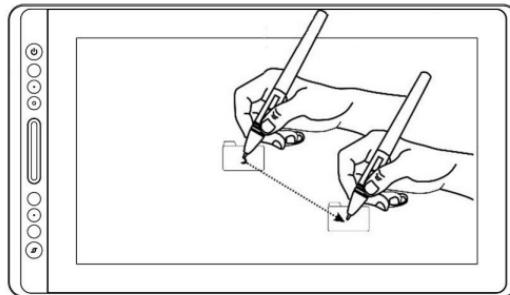

- Using the side buttons

 
The side buttons of the pen can be set to two different customizable functions. You can use the buttons whenever the pen tip is within 10mm of the display active area. You do not have to touch the pen tip to the display in order to use the switch.

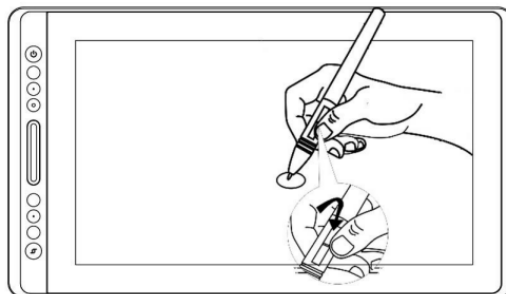

2. Using the display

- Power button
The power button is placed on the left side of the digital screen, you need to turn on the power switch before using.
- Press keys
There are 4 press keys on the left side of the display, which you can modify the functions according to your own habits, this will help to improve your work efficiency.
- Touch bar
There is a touch bar on the left side of the display, you can slide up and down to zoom, or you can customize the function.

 3. OSD Function

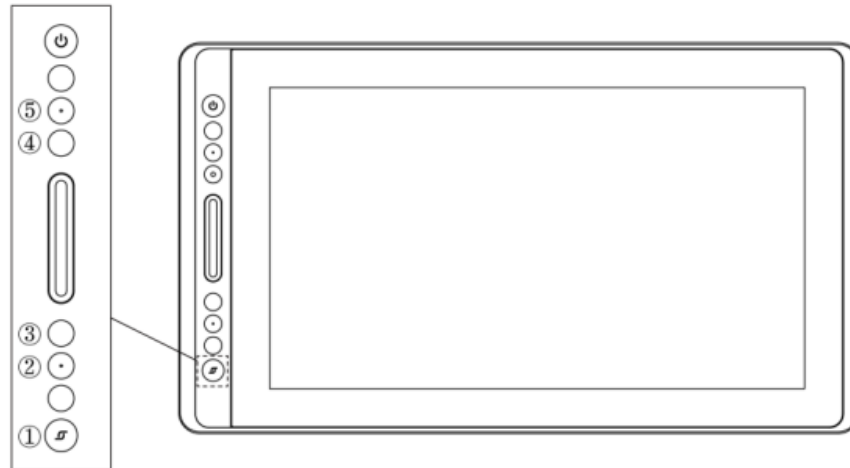

- Enter OSD menu
 - Press ① - “Function Button” for three seconds until the OSD menu appears and the indicator light turns on
 - The function keys ② ③ ④ ⑤ assume new OSD functions
 - ② Previous menu
 - ③ Confirm menu selection
 - ④ - down/left/decrease
 - ⑤ + up/right/increase
- Exit OSD menu
 - Press ① - “Function Button” for three seconds to exit OSD the menu and the indicator light turns off
 - The function keys ② ③ ④ ⑤ become shortcut functions again